

PATCH FITTING





MWO 701
Top Patch Fitting

For glass thickness of
10mm, 12mm & 15mm.

Finishing:
- Polished Stainless Steel (PSS)
- Satin Stainless Steel (SSS)

Detailed Glass Cutout:

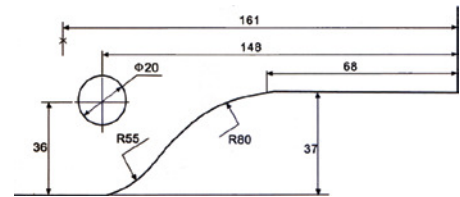
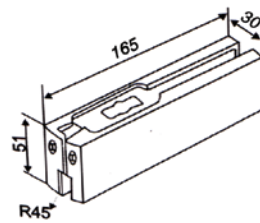


MWO 702
Bottom Patch Fitting

For glass thickness of
10mm, 12mm & 15mm.

Finishing:
- Polished Stainless Steel (PSS)
- Satin Stainless Steel (SSS)

Detailed Glass Cutout:

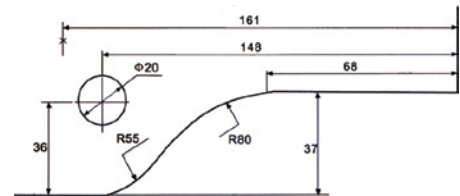
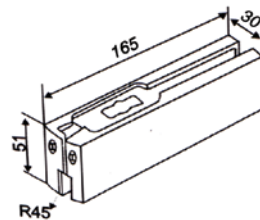


MWO 703
Lockset Patch Fitting

For glass thickness of
10mm, 12mm & 15mm.

Finishing:
- Polished Stainless Steel (PSS)
- Satin Stainless Steel (SSS)

Detailed Glass Cutout:

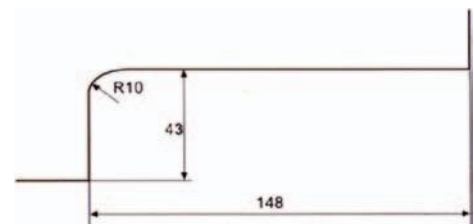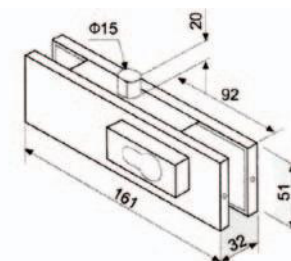




MWO 701A


Overhead Top Patch Fitting

For glass thickness of 10mm & 12mm.

Finishing:
- Polished Stainless Steel (PSS)

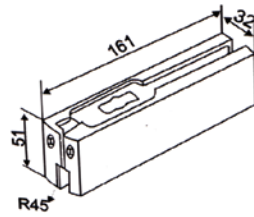

Detailed Glass Cutout:

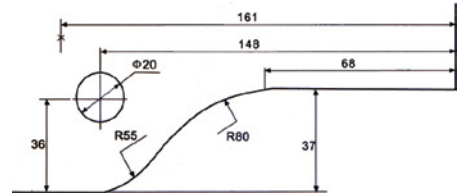


MWO 730


G-W Transom Patch Fitting

For glass thickness of 10mm & 12mm.

Finishing:
- Polished Stainless Steel (PSS)

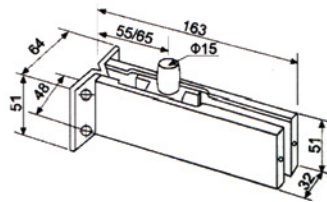

Detailed Glass Cutout:

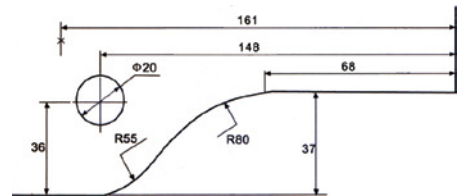


MWO 740

G-G Transom Patch Fitting

For glass thickness of 10mm & 12mm.

Finishing:
- Polished Stainless Steel (PSS)

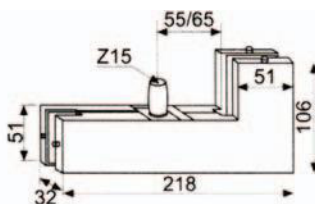

Detailed Glass Cutout:

